INSTRUCTION MANUAL

Steam Press Stand for SINGER®
INTELLIGENT™ 2.0 Series *(STU)*



SINGER®

https://www.singermachines.co.uk

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this product.
Keep the instructions at a suitable place close to the Stand. Make sure to hand them over if the Stand is given to a third party.

DANGER

- Always put the stand on a secure, level floor when using, or the appliance may topple over.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop in water or other liquid.
- Use caution when handling the stand; pushing or pulling it forcefully can cause it to tip over. Excessive force or weight can also damage the stand and lead to it toppling.
- Only place the Steam Press on the stand. Adding other items may damage the stand.
- A toppled or damaged stand can pose a risk to people nearby.
- Fold the stand slowly and carefully to avoid pinching your fingers.

WARNING

- This appliance is intended for use by adults. The appliance can be used with adult supervision by (i) children aged from 8 to 12 years and (ii) persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision. It is not allowed for anyone to play with the machine. Children up to 8 years are not allowed to use the machine.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the stand is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Always put the stand on a secure, level floor when using.
- This stand is only used for: SINGER® 20” Steam Press: ESP20, 26” Steam Press: ESP26, 36" and Steam Press: ESP36.

SAVE THESE INSTRUCTIONS

Intended Use


The optimal uses are described in these instructions. This product is not intended for industrial or commercial use.

Additional assistance, by region, may be found online at www.singer.com

You can find a digital version of this manual online at www.singer.com

Overview and Accessories Descriptions

The following features and accessories are included with your stand.

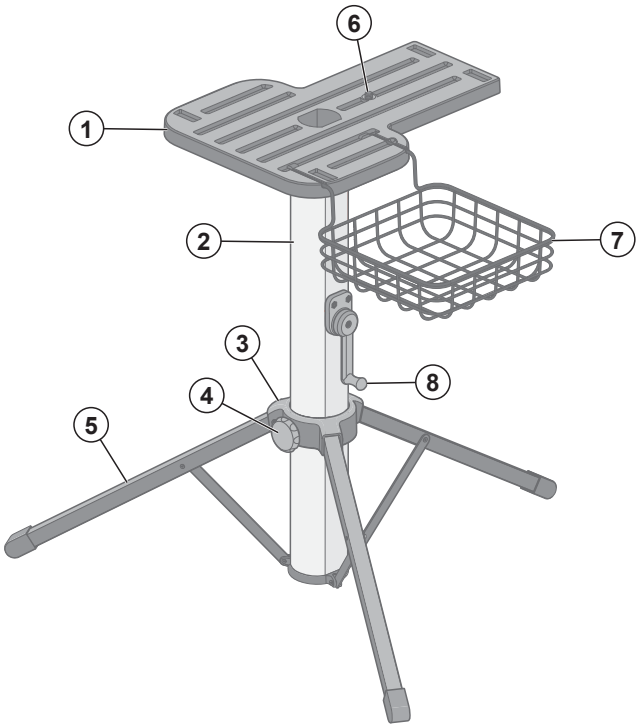


1. **Top -** Holds the steam press.
2. **Column -** Supports the stand.
3. **Leg Hub -** Attaches the Legs and Bottom Hub.
4. **Knob for Leg Hub -** Secures the Leg Hub by tightening it.
5. **Legs and Bottom Hub -** Fold and unfold the Legs.
6. **Thumb Screw for Top** - Attaches the Steam Press to the stand
7. **Basket** - Storage for garments, fabric, and tools.
8. **Crank and Housing Lever** - Adjust the stand height as desired.

Assembling the Stand


1.Insert the Tripod Assembly into the Column as shown below. Ensure that the buckle on the Leg Hub clicks into the corresponding hole on the Column.

2. Tighten the Leg Hub Knob to secure the Tripod Assembly in place.

1.

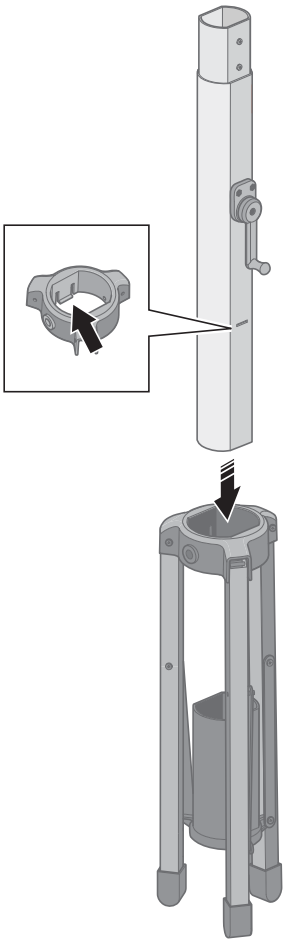


2.

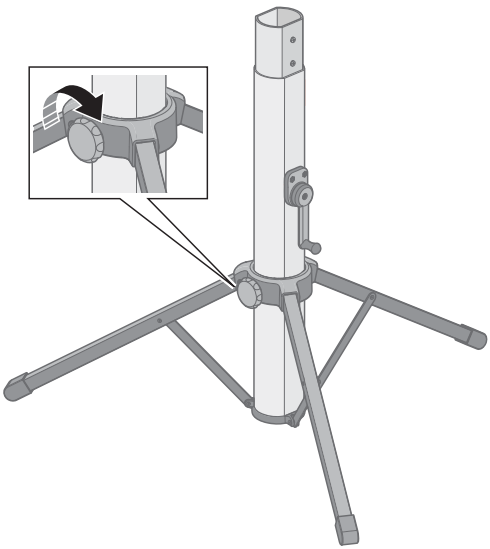


3. Position the Top by aligning it with the plastic part at the top of the Column, then secure it with four screws.

4. Slightly spread the basket hook, insert it vertically into the hole of Slot A on the Top, rotate the basket 90 degrees, and press it firmly into Slot B.

3.

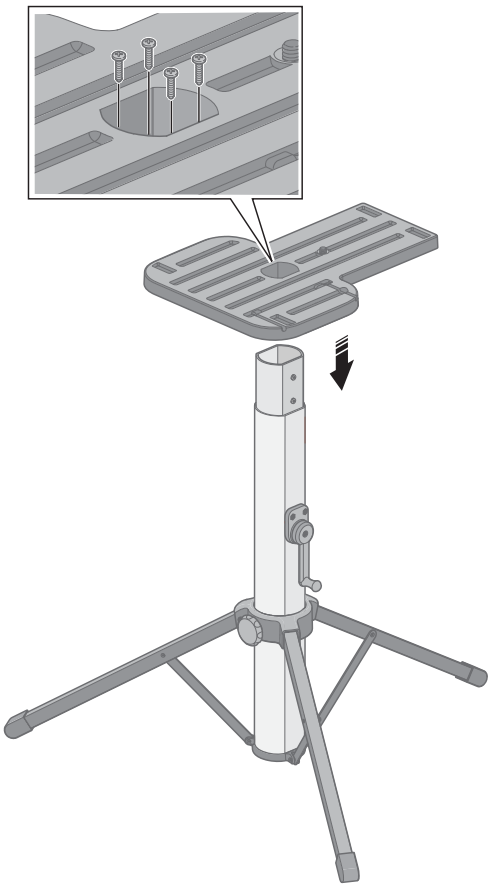

4.

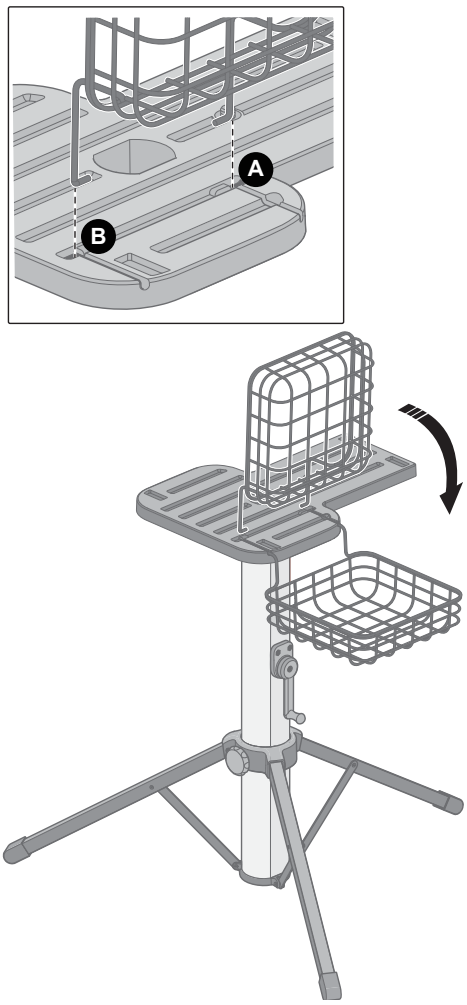


Installing the Steam Press on the Stand

Place the Steam Press on top of the stand, aligning the molded feet on the bottom of the press with the matching grooves on the stand.

Ensure the thumb screw lines up with the threaded insert on the bottom of the Steam Press.




Tighten the thumb screw by turning it clockwise until it is secure.

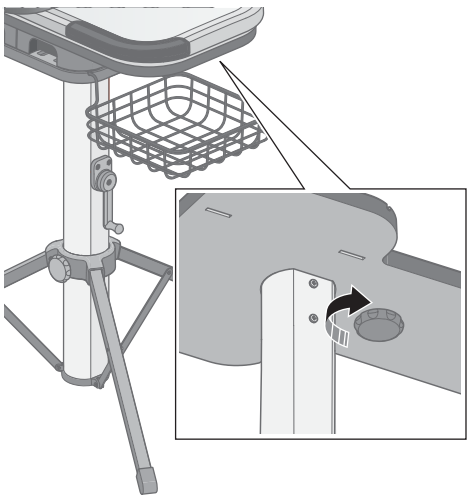

Unfolding the Stand


Place the stand upright on a flat surface.

Gently pull the closed legs outward, then push the Bottom Hub upward to unfold the three legs.

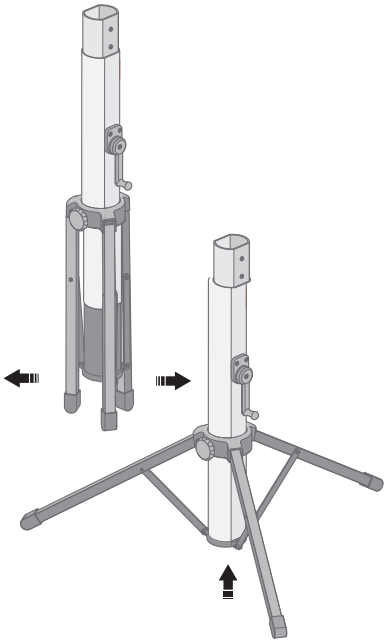

Adjust the Height of the Stand

Turn the lever (A) counterclockwise to raise the stand or clockwise to lower it. Once it reaches the desired height, tighten the knob (B) by turning it clockwise.

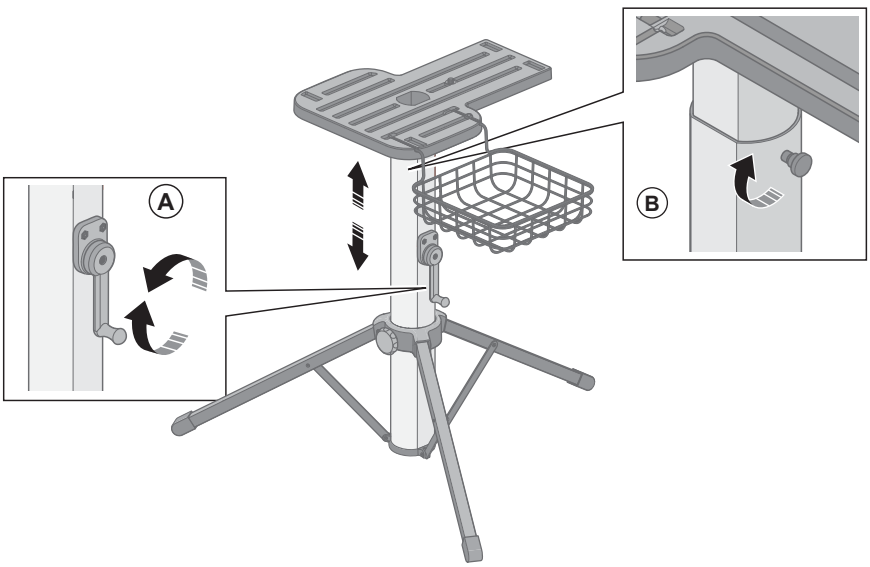

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The Tripod Assembly fails to insert into the Column:	Column deformation.	Replace the Column.
	The Tripod Assembly hardware is deformed or incorrectly installed.	Replace the Tripod Assembly.
The Tripod Assembly fails to open or close:	Column is deformed.	Replace the Column.
	Foreign object in the Column.	Remove the foreign object from the Column.
	Leg of Tripod Assembly is detached.	Replace the Leg.
The stand fails to adjust height:	Internal components are damaged.	Stop using the stand immediately and contact our Consumer Support Department for assistance.

We reserve the right to change the machine equipment and the assortment of accessories without prior notice, or make modifications to the performance or design. Such modifications, however, will always be to the benefit of the user and the product.

INTELLECTUAL PROPERTY

SINGER and the Cameo “S” Design are exclusive trademarks of Singer Sourcing Limited LLC or its Affiliates.

MANUEL D'INSTRUCTIONS

Steam Press Stand for SINGER®
INTELLIGENT™ 2.0 Series *(STU)*



SINGER®